

# Double Head COB Manual

## 一、Function setting

menu	Numerical value	describe
r255	0-255	Warm LED, brightness from dark to bright
G255	0-255	Warm LED, bright from dark to bright
B255	0-255	White LED, brightness from dark to bright
u255	0-255	White LED, bright from dark to bright
FH99	1-99	Strobe, speed from slow to fast
CL01	1-15	Mixed color combination
CC99	1-99	Speed from slow to fast
dE99	1-99	Gradual, slow to fast
CP99	1-99	The pulse changes from slow to fast
SU01	1-16	Voice control, 1-15 is voice control mixing color strobe, 16 is voice control jump
A001	1-512	Console mode 1 or slave mode
d001	1-512	Console mode 2

MENU is the menu switch key, UP and DOWN are the value switch keys, and ENTER is the confirm key.

## 二、DMX control

A001 ( Console mode 1 )		
aisle	Channel value	Function description
CH1	1~255	Total dimming
CH2	1~255	Warm LED from dark to bright
CH3	1~255	Warm LED from dark to bright
CH4	1~255	White LED from dark to bright
CH5	1~255	White LED from dark to bright
CH6	1~255	Stroboscopic from slow to fast
CH7	1~62	Mixed color combination mode, through CH8
	63~124	Jump mode, adjust the speed through CH8
	125~186	Gradual mode, adjust the speed through CH8

		CH8
	250~255	Voice control mode, select voice control mode through CH8

CH8	1~255	Built-in effect speed
-----	-------	-----------------------

d001 ( Console mode 2 )		
aisle	Channel value	Function description
CH1	1~255	Total dimming
CH2	1~255	Stroboscopic from slow to fast
CH3	1~62	Mixed color combination mode, through CH4
	63~124	Jump mode, adjust the speed through CH4
	125~186	Gradual mode, adjust the speed through CH4
	187~249	Pulse change mode, adjust the speed through CH4
	250~255	Voice control mode, select voice control mode through CH4
CH4	0~255	Built-in effect speed
CH5	1~255	Warm LED from dark to bright
CH6	1~255	Warm LED from dark to bright
CH7	1~255	White LED from dark to bright
CH8	1~255	White LED from dark to bright