

# Channel list

## 10 Channel mode

CHAN NEL	FUNCTION	value	effect
1	DIMMER	0~255	Light output linearly increases from no-light to maximum brightness
2	STROBE	0~3	Close
		4~251	Strobe from slow to fast
		252~255	Open
3	FOCUS	0~255	Focus moves linearly from far to near position
4	COLOUR	0~255	colour moves linearly
5	PAN	0~255	Pan movement/positioning from 0° to 540°
6	PAN FINE	0~255	Fine control of pan movement
7	TILT	0~255	Tilt movement/positioning from 0° to 270°
8	TILT FINE	0~255	Fine control of tilt movement
9	PAN-TILT TIME	0~255	Speed from fast to slow
10	RESET	0~49	Unused range
		50~99	Effects reset
		100~199	Pan /Tilt Reset
		200~255	Reset

