

# **IMRELAX 54\*3W RGBW HIGH QUALITY 4IN1 LED PAR LIGHT (IM-PL5403)**



## **User Manual**

Thank you so much to choose this product; it is adopting the most advanced lamps, which is called LED lamps. It conquers a lot of disadvantages such as power wasting, short using life, high temperature, etc. It has advantages of power saving, long life (it can reach 60,000.00 hours in general), high brightness, fresh colors...It is the best stage illuminating and various effect decorative products.

## **Technical:**

Voltage: AC110-220V 50/60HZ

Power supply: 180W

Light source: 3W\*54PCS

Color: R,G,B,W

Channel: 8/4CH

Operation: DMX512, Auto, Sound, Master-slave

Package: 1PCS/BOX, 6PCS/CARTON

## **Security:**

1. Make sure the user voltage cannot higher or lower than the regulate value of the user manual.
2. Please take more attention while installing the fixtures. Avoid touching exposed AC cord, or will cause deadly accident.
3. When installing the fixtures, make sure the fixtures are not exposed in extremely hot, humid or dusty environment. Make sure the distance between the fixture and the lighted object is not less than 0.5 meter. Make sure there is no combustibile or explosive object around 0.5 meters.

**DMX512Control: 8 Channel Model(A001)**

CH	Function	Instruction
CH1	Dimmer	R、 G、 B、 W dimmer : from dark to bright
CH2	R dimmer	R dimmer : from dark to bright
CH3	G dimmer	G dimmer : from dark to bright
CH4	B dimmer	B dimmer : from dark to bright
CH5	W dimmer	W dimmer: from dark to bright
CH6	Strobe	R、 G、 B、 W strobe: from slow to fast
CH7	Function choice	0~50: DMX 8CH Control. 51~100: Different Colors Output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH8	Function speed	Speed function, from slow to fast

**DMX512Control: 4Channel Model(D001)**

Channel	Function	Instruction
CH1	R Dimmer	Dimmer- Dark to Bright
CH2	G Dimmer	Dimmer- Dark to Bright
CH3	B Dimmer	Dimmer- Dark to Bright
CH4	W Dimmer	Dimmer- Dark to Bright

## Menu Display

No	Show	Function	Instruction
1	<b>d001</b>	DMX Address (001~512)	DMX-512 address set, 4 Channels mode
2	<b>A001</b>	DMX Address (001~512)	DMX-512 address set, 8 Channels mode
3	<b>r255</b>	Red (000~255)	UP、DOWN Change brightness
4	<b>G255</b>	Green (000~255)	UP、DOWN Change brightness
5	<b>b255</b>	Blue (000~255)	UP、DOWN Change brightness
6	<b>u255</b>	white (000~255)	UP、DOWN Change brightness
7	<b>FH99</b>	Strobe flash (01~99)	UP、DOWN Change the speed
8	<b>CL01</b>	Different Colors Output (01~08)	UP、DOWN Change brightness
9	<b>CC99</b>	Colors Jump Change (01~99)	UP、DOWN Change the speed
10	<b>DE99</b>	Colors Gradate (01~99)	UP、DOWN Change the speed
11	<b>CP99</b>	Colors Pulse Change (01~99)	UP、DOWN Change the speed
12	<b>SU01</b>	Colors sound-Active (01~09)	UP、DOWN Change the effects