

# IMRELAX IM-PLWP1515Z RGBW LED Waterproof Zoom Par Light



IMRELAX



## USER MENU

## 1. Menu:



A B C D

- A. Function
- B. Up
- C. Down
- D. Enter

Operating instructions: Press the function key A to cycle out different functions, and press the B or C key to modify the parameter value. Press D to confirm.

## 2. Detail Menu Instructions

No.	Menu	Function	Instructions
1	d001	DMX512 Address Setting 001	Press the Up and Down keys to adjust the address code, and press the Enter key to save.
2	r255	Red Color Brightness Adjustment 255	Press the Up and Down keys to adjust the Red color, and press the Enter key to save.
3	G255	Green Color Brightness Adjustment 255	Press the Up and Down keys to adjust the Green color, and press the Enter key to save.
4	b255	Blue Color Brightness Adjustment 255	Press the Up and Down keys to adjust the Blue color, and press the Enter key to save.
5	H255	White Color Brightness Adjustment 255	Press the Up and Down keys to adjust the White color, and press the Enter key to save.
6	F255	Zoom Adjustment	Press the Up and Down keys to adjust the Zoom range, and press the Enter key to save.
7	Pr01	Build-in Effect Adjustment 01	Press the Up and Down keys to adjust the Build-in effect, and press the Enter key to save.
8	SP01	Build-in Effect Speed Adjustment 16	Press the Up and Down keys to adjust the speed of Build-in effect, and press the Enter key to save.

9	LD01	Linear Dimming Mode Choose	Press the Up and Down keys to adjust the Dimming Mode, and press the Enter key to save.
10	AUTO	Auto Mode	Press the Enter key to save.
11	AUDI	Sound Control Mode	Press the Enter key to save.
12	NT00	Temperature Display	Display the current working temperature
13	DISP	Display Direction Adjustment	Press the Up and Down keys to adjust the Display Direction, and press the Enter key to save.
14	REST	Reset	Press the Enter key to confirm the reset.

### 3. DMX512 Channels

No.	Function	Instructions
1 CH	Dimming	(0-255) R、G、B、W All linear dimming, from dark to bright
2 CH	Strobe	(0-255) R、G、B、W Strobe, from slow to fast
3 CH	R Dimming	R dimming, (0-255) linear dimming, from dark to bright
4 CH	G Dimming	G dimming, (0-255) linear dimming, from dark to bright
5 CH	B Dimming	B dimming, (0-255) linear dimming, from dark to bright
6 CH	W Dimming	W dimming, (0-255) linear dimming, from dark to bright
7 CH	Color Select	0-255 color combination.
8 CH	Micro	(0-10) None; (11-120) Jump change (121-180): Gradual change (181-244): Jump change, gradual change (245-255) Sound Control
9 CH	Micro Speed	0-255 From Fast to Slow
10 CH	ZOOM	(0-255) Zoom adjustment
11 CH	Reset	Reset

In the address code status, if there is no console connection after multiple machines are connected, the master-slave connection function can be realized, and one of the devices can be operated, and the other devices in the address d001 state will run the program synchronously with the host. After the console is turned on, if the console signal is received, the "d" of the address code will become "a", and the device in the address state can be controlled by the console.